

## step 1

Basic setup of the board and accessories



- ✓ Is the heat sink attached to the CPU
- ✓ Is the RTC Battery plugged in the pin header
- ✓ Power adapter with 3A@5V. 5.5/2.1mm DC jack
- ✓ HDMI cable with type A male connector
- ✓ Keyboard & mouse to control your up board

## step 2

Prepare your bootable drive with the operating system of choice



Download Windows ISO file and store it in bootable USB with 'Windows USB/DVD Download Tool' (Windows ISO file is purchasable from Microsoft store)

Windows 8.1 / 10 drivers & Windows installation guide are available at:  
[up-community.org/index.php/downloads](http://up-community.org/index.php/downloads)




To prepare another (linux or android based) operating system, please visit our UP community page



[up-community.org/index.php/downloads](http://up-community.org/index.php/downloads)

## step 3

Connect your UP board in the following sequence

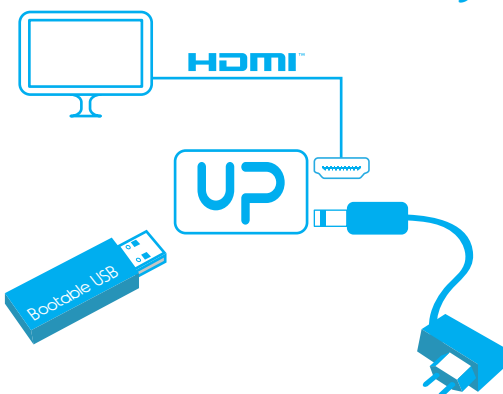

- ✓ bootable USB drive with ISO or OS preload
- ✓ HDMI cable to your monitor, Keyboard+ mouse
- ✓ Power DC cable (this will power on the board)
- ✓ Switch to the correct HDMI input
- ✓ Wait for the UP BIOS logo!